

TR06N Command List

Command Setting		
1	Add SOS Number	SOS,A,No.1, No.2,No.3#
2	Delete SOS Number	SOS,D, Serial No.1, Serial No.2, Serial No.3# SOS,D, Serial No.1# SOS,D, phone number#
3	APN Setting	*APN,APN's Name,IP, PORT#
4	APN Deleting	*APN,0#
5	DNS Setting	SERVER,0,DNS,Port,0# use our platform www.gpsgreat.com , send like below: SERVER,0,www.gpsgreat.com,88,0#
	IP Setting	SERVER,0,IP,Port,0# use our platform www.gpsgreat.com , send like below: SERVER,0,58.64.200.60,88,0#
6	GPRS time interval setting	TIMER,time(second)# (Time range is from 10-1800s, Default as 10s.)
7	Deactivate GPRS	TIMER,0#
8	Sensor alarm time setting	DEFENSE,time# Time range:1-60mins. Default as 10mins
9	Sensor detecting time	SENSOR,detect time,alarm delaying time# Detect time arrange:1-999s, default as 10s Alarm time arrange:10-300s, default as 180s
10	Sensor Off	SENSORSET,0#
11	Sensor on	SENSORSET,5#
11	Centre number setting	CENTER,A,phone number# Centre number is required for vehicle power cut-off or restore power function via SMS. Vehicle power cut-off or restore power via VOICE COMMAND does not require centre number.
12	Delete centre number	CENTER,D#
13	Vehicle power cut-off	RELAY,1#
14	Vehicle power restore	RELAY,0#
15	Over speed setting	SPEED,time,speed# (The time ranges from 1-10minutes, the unit of speed is km/h)

16	Delete over speed setting	SPEED,0,0#
17	Fence alarm setting	FENCE,ON,0,latitude,longitude,radius,IN(OUT)# To set current position as centre, the format is: FENCE,ON,0,0,0,radius,IN(OUT)# (The unit of radius is km)
18	Call alarm on	CALLALARM,ON#
19	Call alarm off	CALLALARM,OFF#
20	Message for voice monitoring	LISTEN#
21	Alarm GPS Working Time	TIMESSET,time# (Time arrange: 1-999mins,default 20mins) Receive Alarm when ACC OFF, GPS will work 20mins as default.
22	Reboot device	RESET#
23	Factory Setting	FACTORY#
24	Checking Mileage	GETMILEAGE#
25	Clear Mileage	CMILEAGE#
26	Checking Software Version	VERSION#
21	Checking Parameters	PARAM#
27	Checking GPRS Parameter	GPRSSET#
28	Location checking (Get Coordinate)	WHERE#
29	Checking Status	STATUS#
30	Location checking (Get Google Map link)	URL#